

FREE AREA AND DROP PRESSURE

FREE AREA CALCULATION

The Free Area measurements are expressed in SQUARE FEET.

DIMENSIONAL AND PERFORMANCE DATA						
		2 3/8"	4 3/4"	7 3/4"	11 3/4"	15 3/4"
WIDTH (IN INCHES)	8"	.029	.080	.136	.207	.279
	12"	.044	.120	.204	.310	.418
	15 5/8"	.056	.156	.263	.400	.540
	16 1/2"	.060	.196	.280	.426	.575
	24"	.088	.271	.408	.620	.836
	32"	.117	.321	.543	.826	1.115

